


Handle & Interchangeable Heads

User Guide

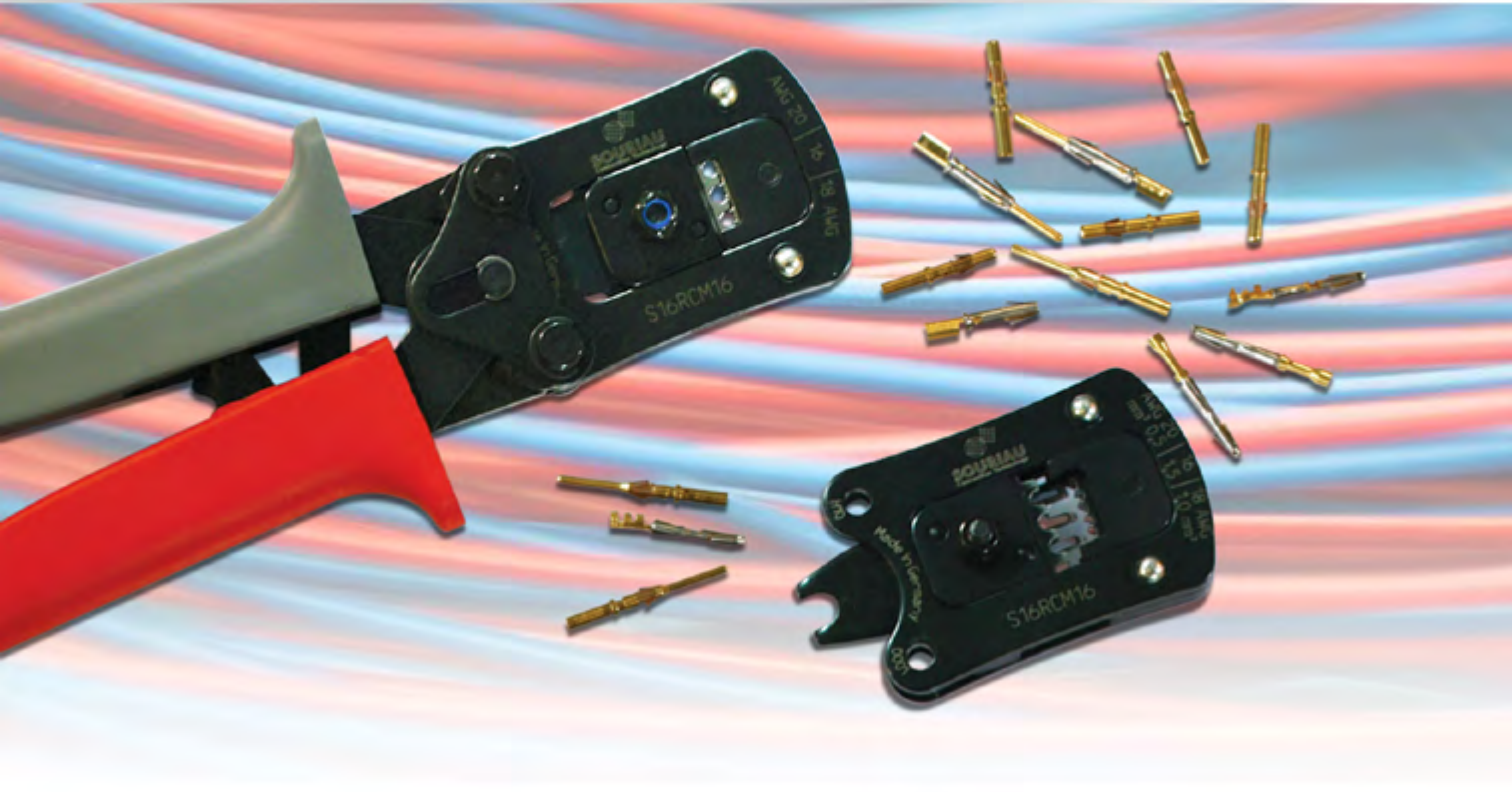


SOURIAU

Handle & Interchangeable Heads

User Guide

SOURIAU

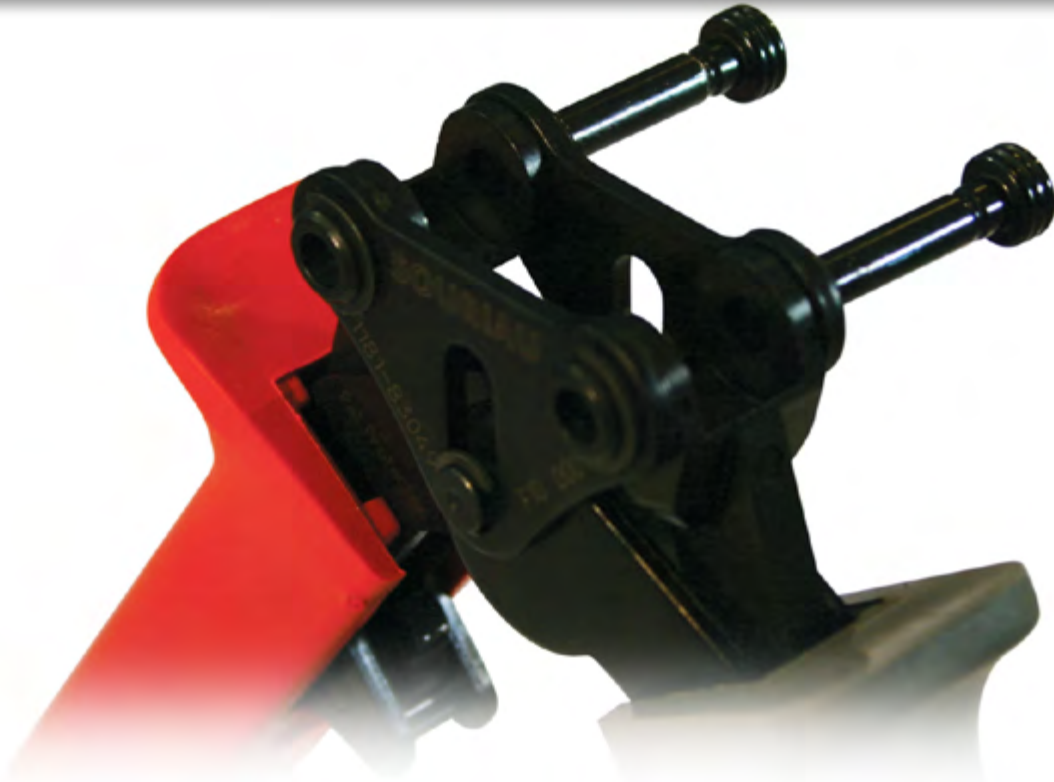

**Fully close then release the tool, keep it open.
Open the 2 pins.**

Handle & Interchangeable Heads

User Guide

SOURIAU



Choose the adapted head, keep vertically and slide it into the handle till the mechanical end.

Handle & Interchangeable Heads

User Guide

SOURIAU




Close simultaneously the two pins to maintain the head.

Handle & Interchangeable Heads

User Guide

SOURIAU

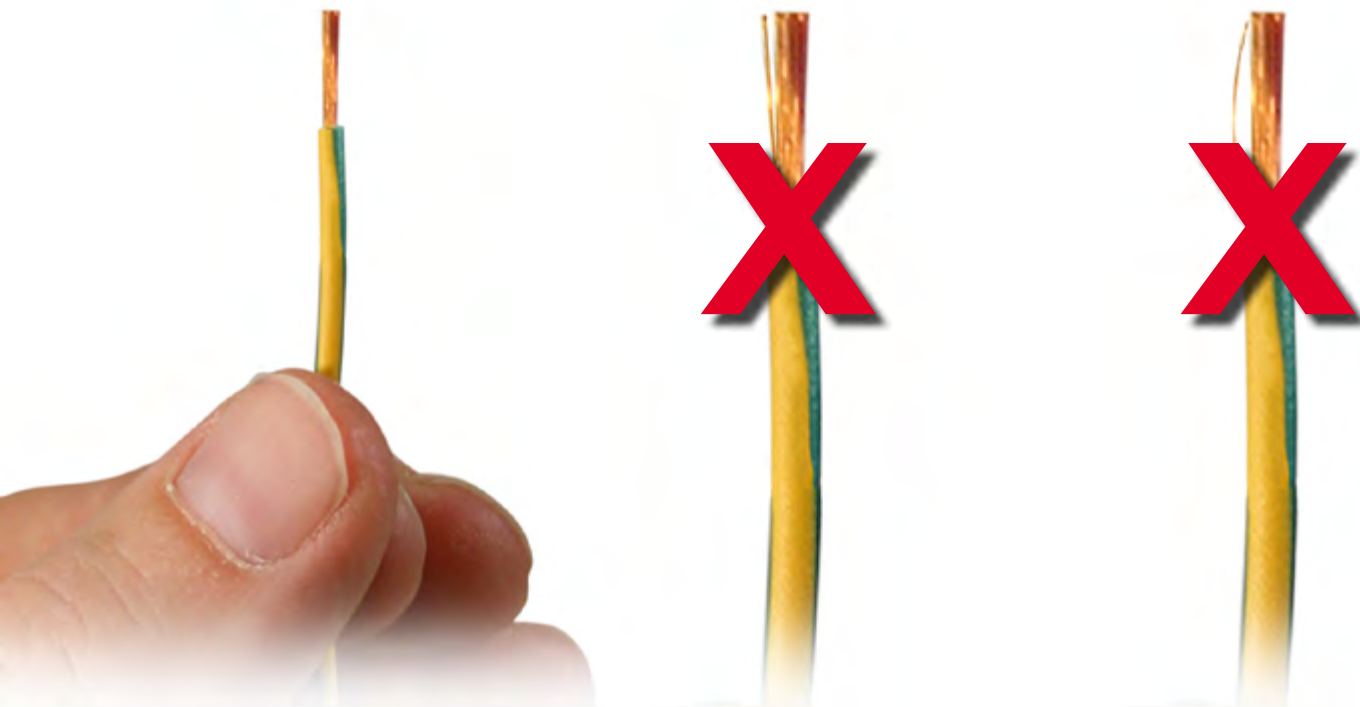


Strip the cable properly checking the size recommended in the catalog.

Handle & Interchangeable Heads

User Guide

SOURIAU

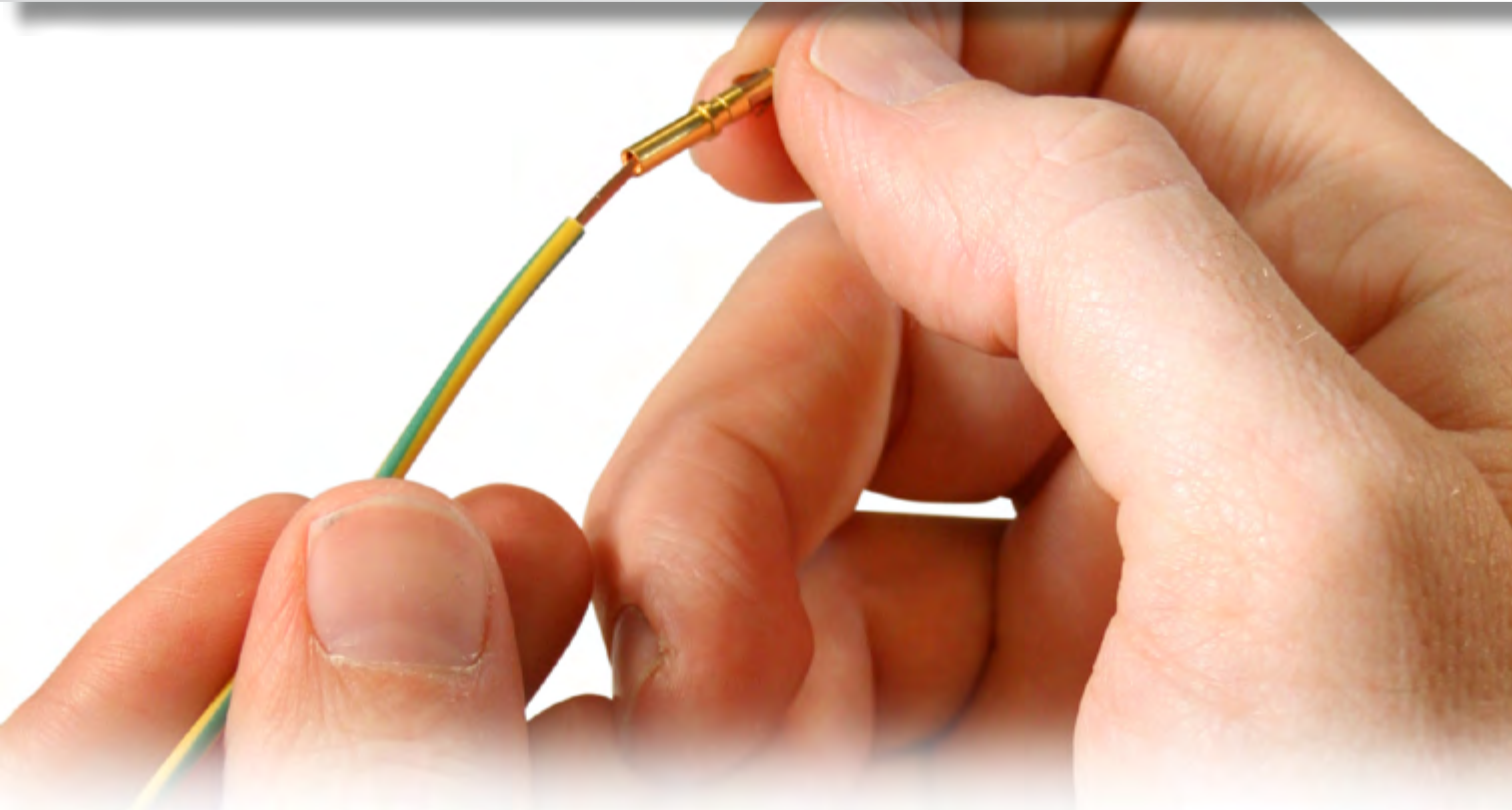

**Place conductors, with no deteriorations, in the bucket contact.
All strands to be located in the crimp bucket.**

Handle & Interchangeable Heads

User Guide

SOURIAU



Position the contact in the bottom of the tools by checking out its orientation.

Handle & Interchangeable Heads

User Guide

SOURIAU




To crimp contact assembly-cable, tighten sharply the clip to the end of the mechanism.

Handle & Interchangeable Heads

User Guide

SOURIAU

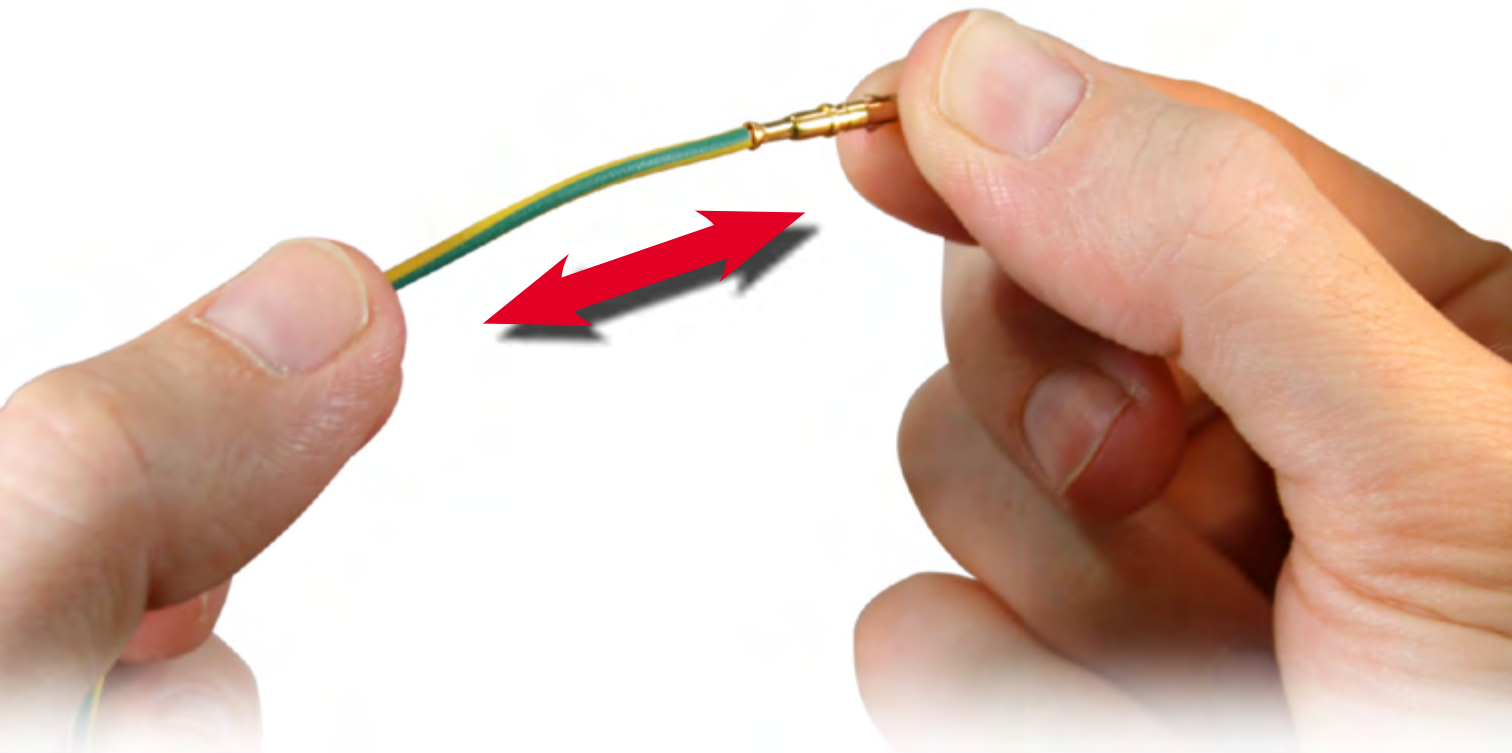

To control crimp quality, slightly pull cable with two fingers to control retention.

Handle & Interchangeable Heads

User Guide

To order the Tool Kit
Contact your SOURIAU dealer



SOURIAU

www.souriau-industrial.com
contactindustry@souriau.com